









 
III. How to Use

1. Ensure the hob is plugged in and the power is on.
2. Place a suitable piece of cookware on the hob. Never place an empty pan or cookware on the hob once it is switched on.
3. Choose the hob that needs to start to work, then press the  button, then the corresponding hob will start to work at the default power (2000W). Set the desired cooking power with the button of  or . The hob will default to 2000W for both the front plate () and rear plate ().
4. To stop working, press  again, then the corresponding hob will stop working.
5. The hob will shut off automatically if there has been no operation for 2 hours.

IV. Usable and Non-usable Utensils


1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



2). Non-usable Pans

 Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



V. How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzene, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).
- 7). "This device is NOT to be used in residential area".
- 8). "This device is NOT to be used in public LV network, but only in private LV network".

Induction Cooker



MODEL: BIH2

Please read it carefully and keep for future reference.



Read the instructions before using the machine

I .Specification

- 1). Item No.: BIH2
- 2). Power Rate: 6000W
- 3). Voltage: 220-240V~ 50/60 Hz
- 4). Temperature: 60°C-240°C

II .Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate since they can get hot.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off to avoid the possibility of electric shock and then take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unite near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.

- 19).  CAUTION: Hot surface.



- 20). This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Seek medical advice before use if fitted with a pacemaker or similar medical device.

- 21). The temperature of accessible surfaces may be high when the appliance is operating.

- 22). Aluminium foil and plastic vessels not placed on hot surfaces.

- 23). The glass-ceramic surfaces are not to be used for storage.

- 24). Metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface within the cooking zones since they could get hot.

- 25). Take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when in close proximity to the hob surface.


- 26). Only use vessels of the type and size recommended.


- 27). After use, switch the hob element off by means of its control. Do not rely on the pan detector.

- 28). Appliance not to be cleaned with water jet.

- 29). Any repairs shall be carried out only by persons trained or recommended by the manufacturer.

- 30). Care be taken to ensure that the splashback and surrounding area free of metallic surfaces.

- 31).  Non-ionizing electromagnetic radiation, be careful.

- 32).  Dangerous voltage, be careful about the high voltage.

- 33). Appliance is not intended to be operated by means of an external timer or separate remote-control system.

- 34). If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- 35). Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

- 36). Additional protective device of residual- current device of 30 mA shall be installed on the fixed wiring before connected to the fixed wiring.

Warning: Children should be supervised to ensure that they do not play with the appliance.