

AQUAJET


AJPR 30 PRE-RINSE SPRAY INSTALLATION & OPERATING INSTRUCTIONS

1. INSTALLATION.

Remove the pre-rinse spray from the box and inspect for damage.


Check that you have the following parts:

BOWL FILLER
SPOUT
(OPTIONAL)

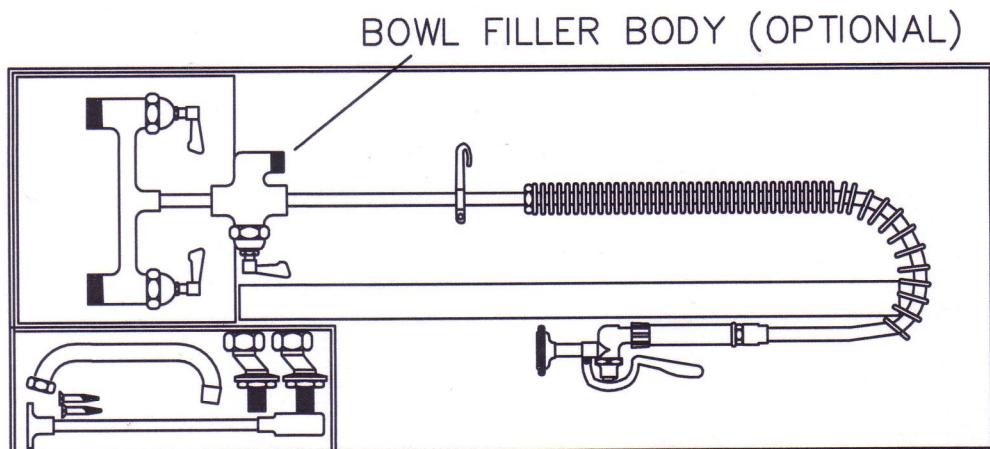

WALL BRACKET ADJUSTABLE INLETS
& SCREWS

2. Fit the pre-rinse spray into the sink tap holes, and tighten the brass fixing nuts to the underside. Cut the wall bracket to the correct length and fix securely to the wall or a solid surface using the screws supplied. Fix the other end of the wall bracket securely to the pre-rinse riser tube.


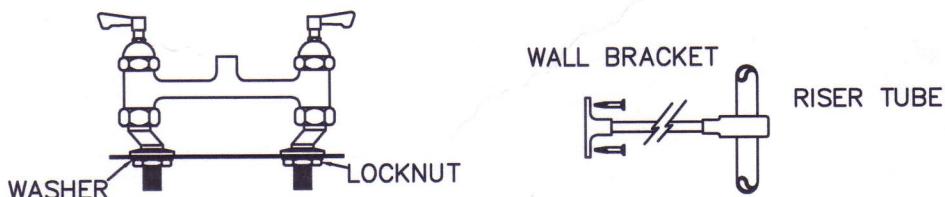


3. Water connection: This pre-rinse spray is designed for connection to a hot water supply up to 50 C and a cold water supply



1.5 bar – 5 bar

water pressure lower than 1.5 bar will affect the performance of the pre-rinse. Do not connect the pre-rinse to a water supply with pressure higher than 5 bar.


Water supply must be flushed free of all debris prior to connection to the pre-rinse

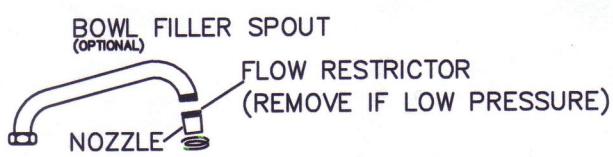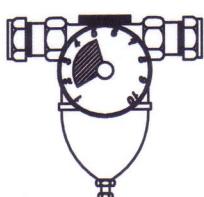

This pre-rinse spray has been pressure tested to 6 bar (88.2 psi) and has been flow tested. Before leaving site, fully test the pre-rinse to ensure that nothing has come loose during the installation / transport process. If you do have to tighten any joints, do not overtighten or use tools that could damage the pre-rinse in any way.

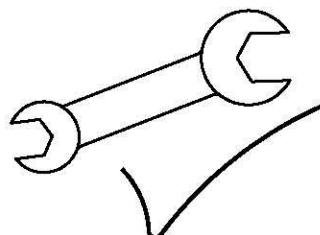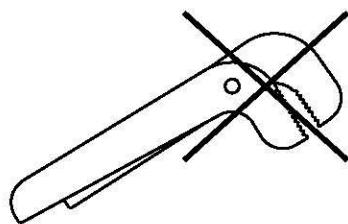

When installing the pre-rinse, ensure that any water flexible hoses are not kinked as this will restrict the flow of water.

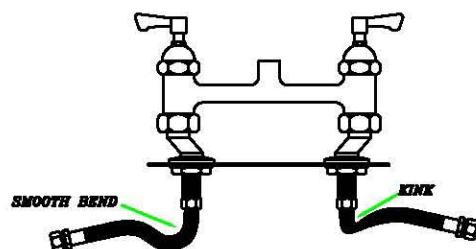

Installation must be in accordance with local authority water regulations
Once the installation is complete, leave this sheet with the operator.

Do not over-extend spray gun head during use
Do not extend past the limits of the sink bowl
Do not pull below the height of the sink top.
Do not restrain gun handle in open position

Notes for the operator:

Turn off deck taps when not in use

